


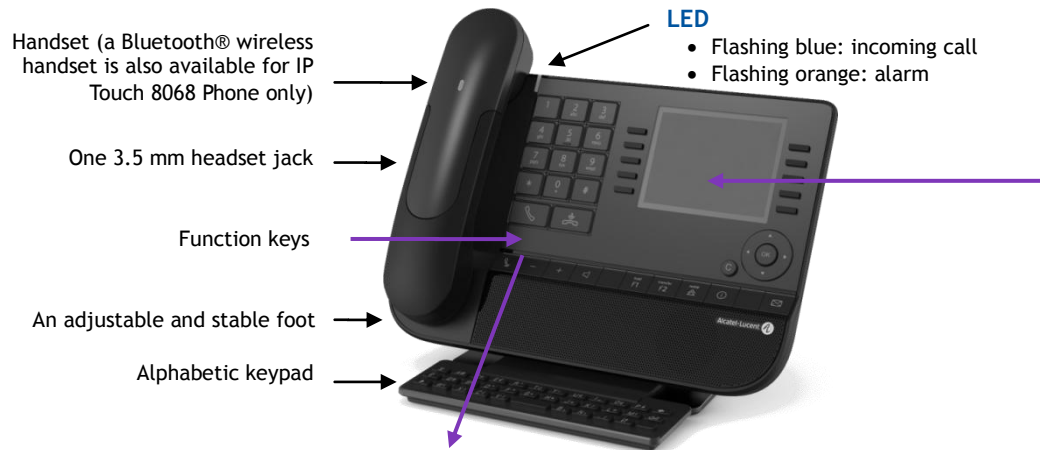




















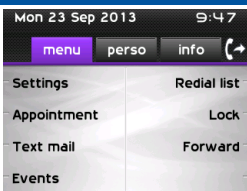




















Alcatel-Lucent 8068/8038/8028/8039/8029 Premium DeskPhone



Function keys	
Mute and intercom.	
Handsfree, handset or headset volume. Adjust contrast	 
Audio services (handsfree, handset or headset).	
<ul style="list-style-type: none"> Programmable keys (F1 and F2 keys): Lit when the function associated with the key is activated. A service or a direct call can be associated to these keys. Pre-programmed function keys are disabled in "safe" mode. The F1 and F2 keys are line keys. 	
Redial key: to access the 'Redial' feature.	
Guide key: Used to obtain information on functions of the "menu" page and to program key of the "perso" page.	
Messaging key to access various mail services. This key is lit when you have received a new voicemail, text message or callback request.	
Handsfree key To make or answer a call without lifting the receiver.	
END key To terminate a call.	
Bluetooth® wireless handset (8068 Premium DeskPhone)	
 Off-hook/On-hook	
Volume/Mute: <ul style="list-style-type: none"> Short successive presses to change the handset volume level (3 levels) Long press to ensure your caller no longer hears you 	

Welcome screens			
	<p>Contains several lines and pages providing information on calls and the features that can be accessed by pressing the keys associated to the labels on the display (10 keys for 8068/38/39 phones and 6 keys for the 8028/29 phones).</p> <ul style="list-style-type: none"> Menu page: Contains all functions and applications accessible via the keys associated with the words on the screen. Perso page: Contains call line keys (allowing supervision of calls) and programmable call keys. Info page: Contains information on the telephone and the status of its functions: name, telephone number, number of messages, activation of transfer function, appointment reminder, etc. Transfer icon: Pressing the key next to this icon allows you to program or change the transfer function. 		
Navigation			
	<ul style="list-style-type: none"> OK key: Used to validate your choices and options while programming or configuring 		
	<ul style="list-style-type: none"> Left-right navigator: Used to move from one page to another and display information about current calls (call in progress, calls on hold, incoming call). 		
	<ul style="list-style-type: none"> Up-down navigator: Used to scroll through the content of a page 		
	<ul style="list-style-type: none"> Use this key to go back to the previous step Use this key to go back to the homepage (long press) 		
Status icons / Call icons			
	Headset connected		Incoming call icon
	Telephone locked		Call in progress icon
	Appointment programmed		Call holding icon
Alphabetic keypad		Add-on module	
Cursor moving keys (left, right, up and down).		<p>The 8028/8029 Premium Deskphone has 4 programmable keys with LED and paper labels. Phone capabilities can be extended with Premium Add-on 10- and 40-key modules or Premium Smart display 14-key module.</p> 	
Caps lock: to write text in capital letters.			
Alt key: to access the purple characters and features.			
Enter key: to validate edited text.			
Backspace key: to delete one character in an edit box.			

All features are described for OmniPCX Office and OmniPCX Enterprise Systems. If a feature works differently on each system it is described twice. The label displayed on the phone depends on the type of phone. This guide provides the labels for 8068/38/39 phones plus 8028/29 phone labels in parentheses (if different).

Call <ul style="list-style-type: none"> Dial the number directly or dial the number after pressing a line key (an off-hook key phone or Bluetooth handset, hands-free key) 	
Call by name (Company directory) <ul style="list-style-type: none"> RCE - Enter the first letters of contact's name and follow the on-screen instructions. OTCT - Enter the name, contact's surname/name or initials and follow the on-screen instructions. 	
Answer a call <ul style="list-style-type: none"> Take the handset off the hook, use an off-hook key (phone or Bluetooth handset), use hands-free key, or press the key next to the incoming call icon 	
Ignore call / End the call	
Redial <ul style="list-style-type: none"> Long press to access the list of the last 10 dialed numbers Short press to call the last dialed number 	
Make a call-back request to a busy number <ul style="list-style-type: none"> <i>Callback</i> 	
Placing a call on hold (hold) <ul style="list-style-type: none"> <i>Hold</i> 	
Sending DTMF signals <ul style="list-style-type: none"> <i>UMFcode</i> (RCE), <i>Send DTMF</i> (OTCT) Send numbers 	
Mute	
Interphony <ul style="list-style-type: none"> The phone automatically answers the call. Before the line is taken, you hear a succession of specific beeps. 	
Making a second call during a conversation <ul style="list-style-type: none"> <i>New call</i> 	
Answering a second call during a conversation <ul style="list-style-type: none"> Press the key associated with the incoming call 	
Switching between calls (Broker call) <ul style="list-style-type: none"> Press the key associated with the call on hold 	
To cancel your second call and recover the first: <ul style="list-style-type: none"> You automatically recover the first call 	
Transferring a call <ul style="list-style-type: none"> You are in conversation with one caller Call a second contact Transfer the call 	
Conference <ul style="list-style-type: none"> Call the first contact Call the second contact <i>Conference (Conf)</i> 	
Make calls via your programmed call keys <ul style="list-style-type: none"> Press the desired programmed call key 	Perso
Modify the programmed key <ul style="list-style-type: none"> Press the programmed key to be modified Follow the on-screen instructions 	Perso
Erase a programmed key <ul style="list-style-type: none"> <i>Settings</i> > <i>Keys</i> (RCE) <i>Settings</i> > <i>Phone</i> > <i>Key program</i> (OTCT) Select the key to be erased Follow the on-screen instructions 	Menu 
Customizing your voice greeting <ul style="list-style-type: none"> <i>Settings</i> <i>Mailbox</i> You can listen to the greeting, customize the greeting and set the default greeting 	Menu
Consulting your voice mailbox	
Diverting calls to your voice mailbox <ul style="list-style-type: none"> Press the key associated to the forward icon <i>Immediate>VM</i> Press the key associated with the type of call forward required 	
Cancel forward <ul style="list-style-type: none"> Press the key associated to the forward icon <i>Cancel fwd.</i> 	
Do not disturb <ul style="list-style-type: none"> Press the key associated to the forward icon <i>DoNotDisturb (DND)</i> 	
Send text messages <ul style="list-style-type: none"> <i>Message</i> <i>SendTxtMsg</i> Enter the destination number Select the type of message to send (fixed Msg, New Msg, ...) 	
Read text messages <ul style="list-style-type: none"> <i>Message</i> <i>ReadTxtMsg</i> 	
Instant Messaging (RCE)	
Consulting the Call log (RCE)	
Information about the phone	Info
Lock/unlock the phone <ul style="list-style-type: none"> <i>Lock</i> 	Menu
Adjust audio volume	
Select the language of your choice <ul style="list-style-type: none"> <i>Settings</i> > <i>Options</i> > <i>Language</i> (RCE) <i>Settings</i> > <i>Phone</i> > <i>Language</i> (OTCT) 	Menu
Choose the tune <ul style="list-style-type: none"> <i>Settings</i> > <i>Phone</i> > <i>Ringing</i> Adjust the ring via the following menus: Melody, Silent, Beeps, Volume, etc. 	Menu
Adjusting screen contrast <ul style="list-style-type: none"> <i>Settings</i> > <i>Phone</i>: > <i>Contrast</i> 	Menu
Modify the password for your phone set <ul style="list-style-type: none"> <i>Settings</i> > <i>Options</i> > <i>Password</i> (RCE) <i>Settings</i> > <i>Phone</i> > <i>Password</i> (OTCT) 	Menu
Homepage <ul style="list-style-type: none"> <i>Settings</i> > <i>Options</i> > <i>Homepage</i> (RCE) <i>Settings</i> > <i>Phone</i> > <i>Homepage</i> (OTCT) Select the default page 	Menu